
Ínteligent

The trusted independent experts for hand dryers and washrooms since 2012.

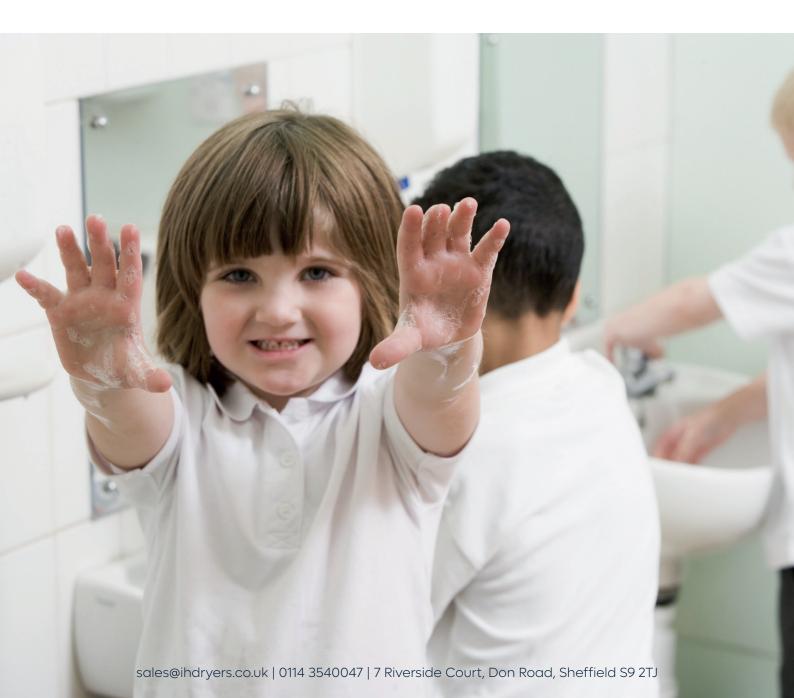

Instructions

Change of BC100EH Strap



- 1. One side of the strap has a single screw to be unscrewed. (see picture left)
- 2. On the other side of the strap there are two screws with a female insert to be unscrewed. (see picture below)

3. Replace the strap and then tighten screws back in position.



washrooms worth experiencing